

Aero Design Ltd.**Work Order Control Sheet**Work Order#: **2017-44** Date Opened: **13 March 2017** Title: **Assembly**Aircraft OEM: Eurocopter Aircraft Model: **AS350** Product Type: **Cargo Basket** Product Model: **XL Ski** Quantity: **1****Work Order Contents**

Work Order/Build Sheets (Procedures Provided)
Additional Work Sheets (Standard Practice)
Drawings (See List Below)
Parts Distribution Sheet
Sub Component Tags
Completed Certification
Time Sheet (R&D)
Notes

Initial or N/A

DB
N/A
DB
DB
N/A
JC
N/A
N/A

Build Sheet Contents

Tasks Initialled
Dual Inspections Initialled

Initial or N/A

JC
JC

Drawing List

Drawing #	Rev #	Description	Initial or N/A
94010	1	Basket Assembly	DB
70405	4	Lid Walkway Mod.	DB
84240	0	Lid Brace Installation	DB
84255	2	Handle Installation	DB
94027	1	Placard	DB

Traveller

Install walkway on lid
Install lid on basket body
Re-tap mounting lug holes and install mount lugs
Install handle brackets
Install handle
Install lid prop
Install data plate

Initial or N/A

DB
DB
DB
DB
DB
DB
DB

Component Completion

Quantity Complete on This Work Order
Quantity Incomplete on This Work Order
Further Processing Required Before Release
Release to Stock as Components

As Instructed

1
N/A
N/A
N/A

Certification

Form One Completed
Serviceable (Green) Tag Completed
In Process (Yellow) Tag Completed
Unserviceable (Red) Tag Completed
Parts Placed in Stores for Distribution

Initial or N/A

JC
N/A
N/A
N/A
N/A

Additional Documentation

Documentation of a minor change
Non-Conformance Report Required
Service Difficulty Report Required

Initial or N/A

N/A
N/A
N/A

Billing

Local (Aero Design)
Research and Development
Third Party

Initial or N/A

JC
N/A
N/A

Work performed by:

Print: D. Bartfai

Sign: 

SCA: AD07

Date: 14-Mar-17

ICC / Dual Inspection performed by:

Print: J. Clarke

Sign: 

SCA: AD02

Date: 14-Mar-17

Work Order closed by:

Print: J. Clarke

Sign: 

SCA: AD02

Date: 14-Mar-17

Approved Manufacturing Facility 73-04

Form 20.D/03

Rev. Original 23 Sep 2014



WO# _____

Approved Manufacturing Facility 73-04

Form 20.F.06


Rev. Original 27 May 2013



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity:	1	
PN:	Tread Plate	
Aircraft:	All	Model: N/A
Description:	Lid Walkway Checker Plate	
Supplier:	Daigle Marine	
Color:	Aluminum	
WO#:	N/A	PO# 17011

1. Approving Civil Aviation Authority/Country Transport Canada		2. AUTHORIZED RELEASE CERTIFICATE FORM ONE			3. Form Tracking No. 2017-0118
4. Organization Name and Address AERO Design Ltd. – 9888A Malaspina Road, Powell River, BC, V8A 0G3					5. Work Order/Contract/Invoice WO 2017-44
6. Item 1.	7. Description Cargo Basket	8. Part Number 94010-01	9. Qty. 1	10. Serial/Batch No. 94001-72	11. Status/Work New
12. Remarks Modified with walkway on lid IAW DCL704					
13a. Certifies that the items identified above were manufactured in conformity to: <input checked="" type="checkbox"/> Approved design data and are in condition for safe operation. <input type="checkbox"/> Non approved design data specified in block 12.			14a. <input type="checkbox"/> CAR 571.10 Maintenance Release <input type="checkbox"/> Other regulation specified in block 12 Certifies that unless otherwise specified in block 12, the work identified in block 11 and described in block 12, has been performed in compliance with the Canadian Aviation Regulations.		
13b. Signature  AD 73-04 02		13c. Approved Organization Number AMF 73-04		14b. Signature	
13d. Name Jeff Clarke - AD02		13e. Date (dd/mmm/yyyy) 14 Mar 2017		14c. Approved Organization Number	
				14d. Name	
				14e. Date (dd/mmm/yyyy)	
<p align="center">Installer Responsibilities</p> <p>This certificate does not constitute authority to install.</p> <p>Installers working in accordance with the national regulations of a country other than that specified in block 1 must ensure that their regulations recognize certifications from the country specified.</p> <p>Statements in blocks 13a or 14a do not constitute installation certification. In all cases, the technical record for the aircraft must contain an installation certification issued in accordance with the applicable national regulations before the aircraft may be flown.</p>					

HIGH TERRAIN



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

Nomenclature: Long basket handle No. of pieces: 1

Manufacturer: Aero Design Ltd.

Part No.: 84261-01 Serial No.: NA

TTSN: NA TSO: NA Rem.: NA

Work Order No.: 2017-31

Remaining Tasks to be Performed: Instal

Signature: David Smith

Date: Feb 23/2017 Lic. No. / SCA AD-05



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

Remarks

Serviceable



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity:

1

PN:

MS20001P4-9600

Aircraft:

All

Model: All

Description:

Hinge

Supplier:

Bisco Industries

Color:

N/A

WO#:

N/A

PO# 16030

CARGO BASKET ASSEMBLY - COMMON**General**

These instructions apply to all cargo basket assemblies. Refer to the following drawings, at the current revision, for dimensions and details:

Bell 206L/407 – Right side only

69810, Revision 3 – Standard Low Mounted Basket

94510, Revision 0 – Extra-Wide Low Mounted Basket

94610, Revision 0 – Extra-Wide Low Mounted Ski Basket

76610, Revision 0 – High Mounted Ski Basket

Eurocopter AS350/AS355 – left or right

77610, Revision 1 – Short Basket

76410, Revision 3 – Medium Basket (left or right)

78410, Revision 2 – Long Basket

94010, Revision 0 – Extra Large (ski) Basket

Robinson R44 – left or right

90610, Revision 0 – Standard Basket (left or right)

Bell 206B – right side only

80210, Revision 0 – Short Basket

80310, Revision 0 – Medium Basket

81110, Revision 0 – Long Basket

Bell 429 – right or left

95911, Revision 0 – Standard Basket

Bell Medium – left or right

75111, Revision 0 – Standard Basket

95511, Revision 0 – Extra Large (ski) Basket

MD600

82811, Revision 0 – Standard Basket

Options

70405, Revision 3? – Lid Walkway

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

Work Order: 2017-44

Date Open: 13 MAR 2017

NO
73-04
01

1. Lid Assembly

- a. Install lid bumpers on bottom.
 - i. Fill bumper holes with RTV silicone sealant.
 - ii. Insert 49205-14 lid bumper, 3 or 4 places per lid.
- b. Install placard on bracket on top of lid.
 - i. Locate placard on bracket.
 - ii. Drill #30 through placard and bracket, using holes in placard.
 - iii. Remove placard and de-burr holes in placard and on bracket.
 - iv. Locate placard on bracket, and cleco in place.
 - v. Rivet placard with four CR3213-4-02 CherryMax rivets.
- c. Option: Install walkway on top of lid (lid must be fitted with walkway provisions)
 - i. Note: avoid touching surface of tread plate with bare hands to prevent smudges or marks on the top surface.
 - ii. Pull tread plate from stock. Shear tread plate to length.
 - iii. De-burr edges of tread plate with scotch-brite disc on die-grinder.
 - iv. Locate tread plate on lid. Hold tread plate in place with bags of lead shot.
 - v. Mark and drill #30 holes:
 1. 0.25" from edge of tread plate, centre on cross members (0.38")
 2. 0.25" from edge of tread plate, middle of each walkway stringer
 - vi. De-burr and counter-bore (if required to provide clearance of rivet head on checker pattern) all holes in tread plate using $\frac{1}{4}$ " piloted counter bore on both sides.
 - vii. De-burr holes in lid tubes.
 - viii. Apply bead of RTV silicone sealant along all tubes under tread plate.
 - ix. Set tread plate in place, secure with clecos if necessary.
 - x. Rivet placard with CR3213-4-02 CherryMax rivets
- d. Record PO/WO of all parts (including lid) used in steps above on attached material tracking list.

NO
73-04
01

2. Body Assembly

- a. Install attachment fittings
 - i. Carefully remove excess powder coat from around attachment lug threads using a countersink.
 - ii. Run 3/8-24 tap into attachment lugs to clear threads.
 - iii. Apply anti-seize compound to attachment fittings 96710-01 (alternate: Ancra 40088-14)
 - iv. Install attachment fittings with two NAS1149F0363P washers in four lugs in basket.
 1. 90610 (Robinson R44) basket only:
 - a. Install 1 fitting 906?? in lower forward attachment lug only.
 - b. Install 3 96710-01 fittings in remaining locations.
 - v. Torque to ??

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

- b. 946 Basket Only: Install Cutout Brace – *must be completed after hinge installation*
 - i. Locate 94621-01 Brace over aft cross tube cutout
 - ii. Install two AN4-6A bolts and two AN4-30A bolts with NAS1149F0463P washers.
 - iii. Torque AN4 bolts to ??
- c. Record PO/WO of all parts (including basket) used in steps above on attached material tracking list.

AD
73-04
07

3. Hinge Installation

- a. Prepare hinge.
 - i. Cut hinge to length:
 - 1. 776, 906 – 54"
 - 2. 751, 803 – 70"
 - 3. 698, 764, 945 – 72"
 - 4. 784 – 90"
 - 5. 940, 946, 959 – 95"
 - ii. Drill #30 pilot holes using hinge jig. For long hinges, flip at specified location on jig.
- b. Install hinge on basket
 - i. Locate hinge on basket (standard baskets)
 - 1. centre fore/aft
 - 2. 0.15" – 0.18" up from bottom edge
 - ii. Locate hinge on basket (extra wide baskets)
 - 1. centre fore/aft
 - 2. set hinge at 90 degrees (as if lid would be installed) using a small square, locate vertical side at 22.5" from outboard edge.
 - iii. Drill #30 through holes in hinge into basket rim. Cleco in place with 1/8 (copper) clecos.
 - iv. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 (black) clecos.
 - v. Remove hinge and de-burr holes in hinge and basket rim.
 - vi. Cleco hinge to basket with 5/32 clecos.
 - vii. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations
- c. Install lid on basket
 - i. Locate lid on hinge (all baskets)
 - 1. center fore/aft
 - 2. 0.15" – 0.18" down from top edge
 - ii. Drill #30 through holes in hinge into lid rim. Cleco in place with 1/8 clecos.
 - iii. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 clecos.
 - iv. Remove hinge and de-burr holes in hinge and lid rim.
 - v. Cleco lid to hinge with 5/32 clecos.
 - vi. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

AD
73-04
01

- d. Record PO of hinge and rivets on attached material tracking list.

4. Install Handle

a. Install handle brackets.

- i. Set 84267-01 handle bracket on provisions in hoops, 2 places.
- ii. Install AN3-11A bolt, NAS1149F0363P washer (2), MS21044N3 nut. Two places per bracket, two brackets per basket.
- iii. Torque AN3 bolts to ??.

b. Install handle

- i. Trim 36278-01R and 36278-01L springs to ensure end of spring does not extend past edge of handle bracket, approximately 1/8". Set springs over bushing of 84261-01 handle assembly.
- ii. Grease two 36275-01 bushings with ??. Insert into bushings of handle assembly.
- iii. Locate handle on basket lid. Insert AN3-12A bolt with NAS1149F0363P through bracket on lid and handle bushing on one end of handle.
- iv. On other end of handle, hook spring over catch rivet on handle assembly and use spring tool to twist spring to catch arm on bracket on lid while inserting AN3-12A bolt with NAS1149F0363P washer through lid bracket and handle bushing.
- v. At first end, remove bolt and repeat step iv.
- vi. Install NAS1149F0363P washer and MS21044N3 nut on both AN3-12A bolts.
- vii. Torque AN3 bolts to ??.

c. Check handle

- i. Operate handle to ensure handle does not bind and springs hold handle in.
- ii. Snap handle into brackets to ensure handle locks.

- d. Record PO/WO of all parts used in steps above on attached material tracking list.

5. Install lid brace

AD
73-04
01

- a. Locate 36280-01 lid brace on bushing in basket. Ensure brace is on forward end of basket as it will be installed on the helicopter.
- b. On lid end, insert AN970-3 washer into end of lid brace. Insert AN3-15A bolt with NAS1149F0363P washer through AN970-3 washer, lid prop, and lid bushing. Install NAS1149F0363P washer and MS21044N3 nut on bolt.
- c. On basket end, insert AN3-17A bolt with AN970-3 washer through lid prop and basket bushing. Install NAS1149F0363P washer and MS2144N3 nut on bolt.
- d. Ensure brace is seated on lip of bushings before tightening nuts.
- e. Torque AN3 bolts to ??
- f. Record PO/WO of all parts used in steps above on attached material tracking list.

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

AD
73-04
02

6. Final Inspection

Dual inspection by a different person than assembled the basket.

a. Check for general condition and correct assembly:

- i. Bolts are tight
- ii. Rivets are installed correctly
- iii. Handle operates correctly
- iv. Lid brace operates correctly



b. Check that PO/WO numbers have been recorded.

NOTES:

1. THIS DRAWING IS AN ALTERNATE CONFIGURATION FOR THE HANDLE INSTALLATION SHOWN ON DRAWING 36255.
2. GREASE BUSHING (ITEM 04) USING MOBILGREASE 28 OR EQUIVALENT PRIOR TO INSTALLATION.

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREIN.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE - CREATED FROM 36255	BJC	NOV 03/09
1	HANDLE END BRACKETS FLIPPED	BJC	SEPT 19/11
2	TITLE BLOCK UPDATED; ADD NOTE 2; HARDWARE UPDATED	BJC	MAR 13/14

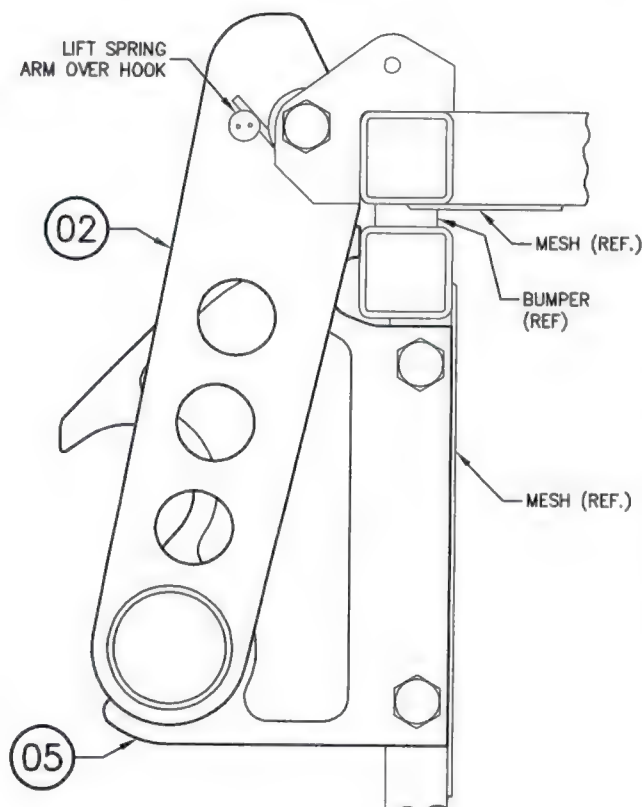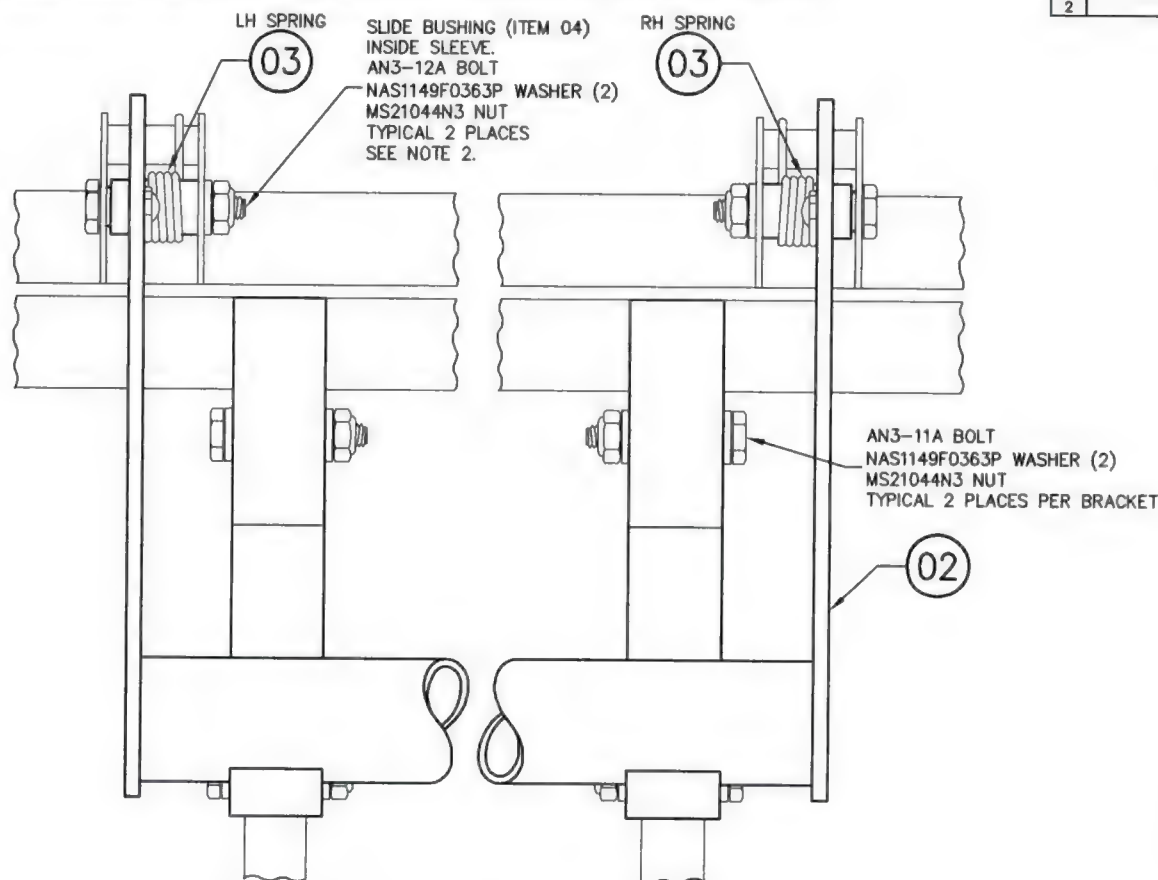

01 HANDLE INSTALLATION

A/R	MOBILGREASE 28		GREASE	MIL-PRF--81322F
4	AN3-11A		BOLT	
2	AN3-12A		BOLT	
10	NAS1149F0363P		WASHER	
6	MS21044N3		NUT	
2	84267-01	D5	BRACKET	
2	36275-01	04	BUSHING	
2	36278-01	03	SPRING (1 LH, 1 RH)	
1	84261-01	02	HANDLE BAR ASSEMBLY	
	84255-01	D1	HANDLE INSTALLATION	
01	PART NO.	ITEM	DESCRIPTION	MATERIAL
QTY.	LIST OF MATERIALS			

APPROVALS	DATE
DRAWN: JEFF CLARKE	03 NOV 2009
CHECKED: E. BURGOIN	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ±0.010 ±1/2° X.XX ±0.03 X.X ±0.1	



AERO DESIGN LTD.


9888A MALASPINA ROAD
POWELL RIVER, BC, CANADA, V8A 0G3
TEL: 604.453.2376 www.aerodesign.ca

**HELICOPTER CARGO BASKET
HANDLE BAR INSTALLATION**

SCALE 1 : 1	DWG. SIZE	DWG. NO.	REV.
SHEET 1 OF 1	A3	84255	2

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.


REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE	*	*

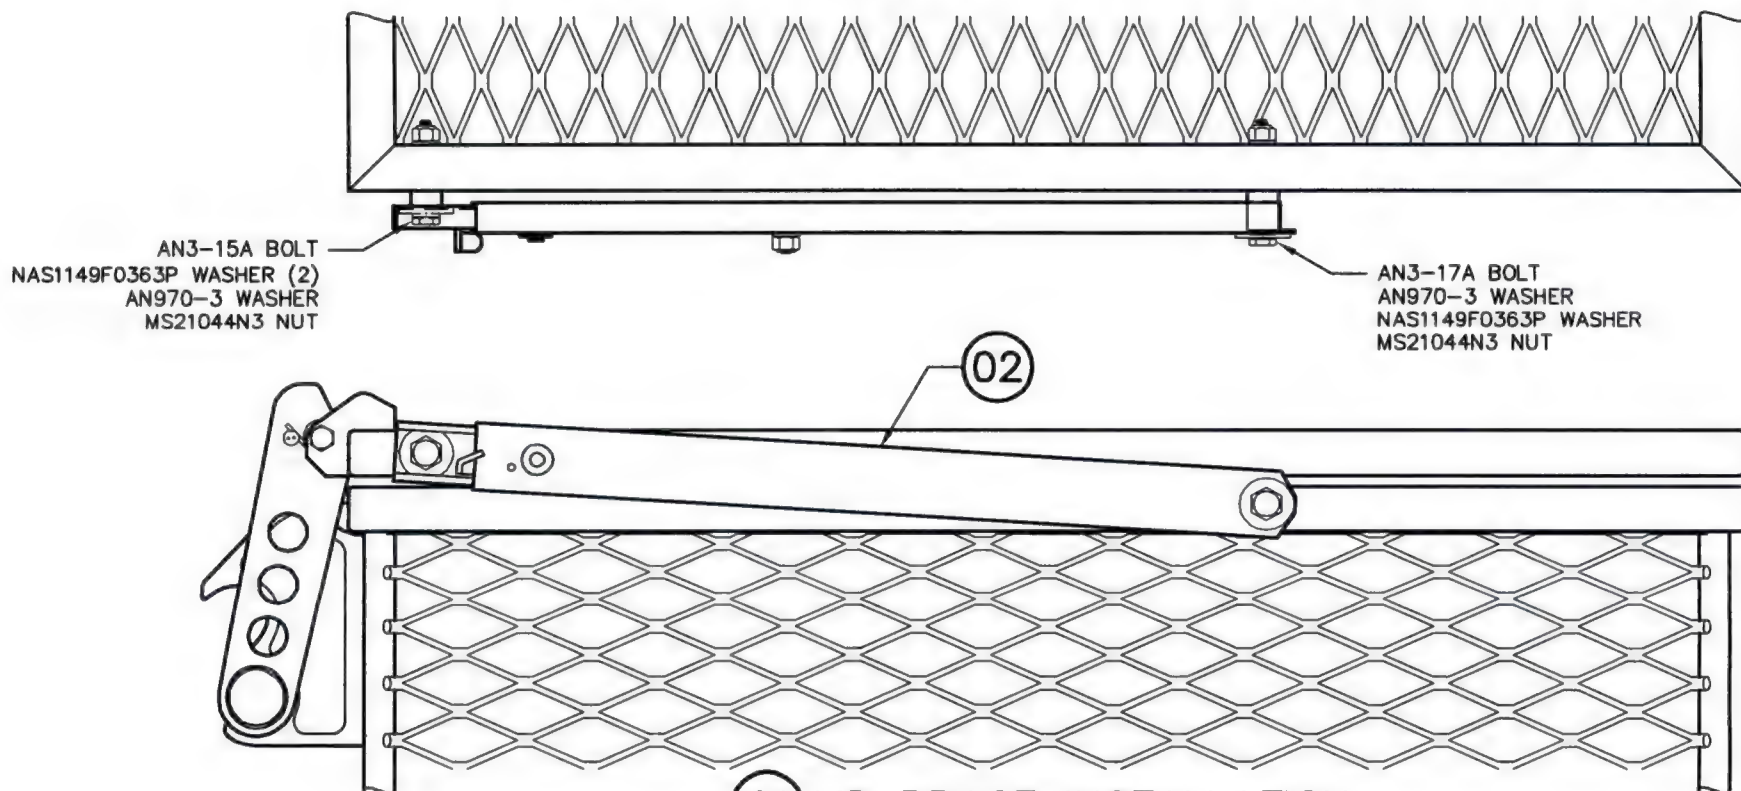


01 LID BRACE INSTALLATION

NOTES

- THIS DRAWING APPLIES TO ALL AERO DESIGN LTD. CARGO BASKET ASSEMBLIES.
LID PROP IS TO BE INSTALLED ON THE FORWARD END OF THE BASKET AS INSTALLED ON THE HELICOPTER.

2	MS21044N3		NUT	APPROVALS	DATE	 <div>AERO DESIGN LTD. 9888A MALASPINA ROAD POWELL RIVER, BC, CANADA, V8A 0G3 TEL: 604.489.2976 www.aerodesign.ca</div>	<div>HELICOPTER CARGO BASKET ALL MODELS LID BRACE INSTALLATION</div> <table><tr><td>NOT TO SCALE</td><td>DWG. SIZE</td><td>DWG. NO.</td><td>REV.</td></tr><tr><td>SHEET 1 OF 1</td><td>A4</td><td>84240</td><td>0</td></tr></table>				NOT TO SCALE	DWG. SIZE	DWG. NO.	REV.	SHEET 1 OF 1	A4	84240	0
NOT TO SCALE	DWG. SIZE	DWG. NO.	REV.															
SHEET 1 OF 1	A4	84240	0															
3	NAS1149F0363P		WASHER	DRAWN: JEFF CLARKE	21 MAY 2014													
2	AN970-3		WASHER	CHECKED: JASON REKVE	21 MAY 2014													
1	AN3-17A		BOLT															
1	AN3-15A		BOLT															
1	36280-01	02	LID BRACE ASSEMBLY															
	84240-01	01	LID BRACE INSTALLATION															
01	PART NO.	ITEM	DESCRIPTION															
QTY.	LIST OF MATERIALS																	

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES.
TOLERANCES ON:
DECIMALS ANGLES
X.XXX ±0.010 ±1/2"
X.XX ±0.03
X.X ±0.1

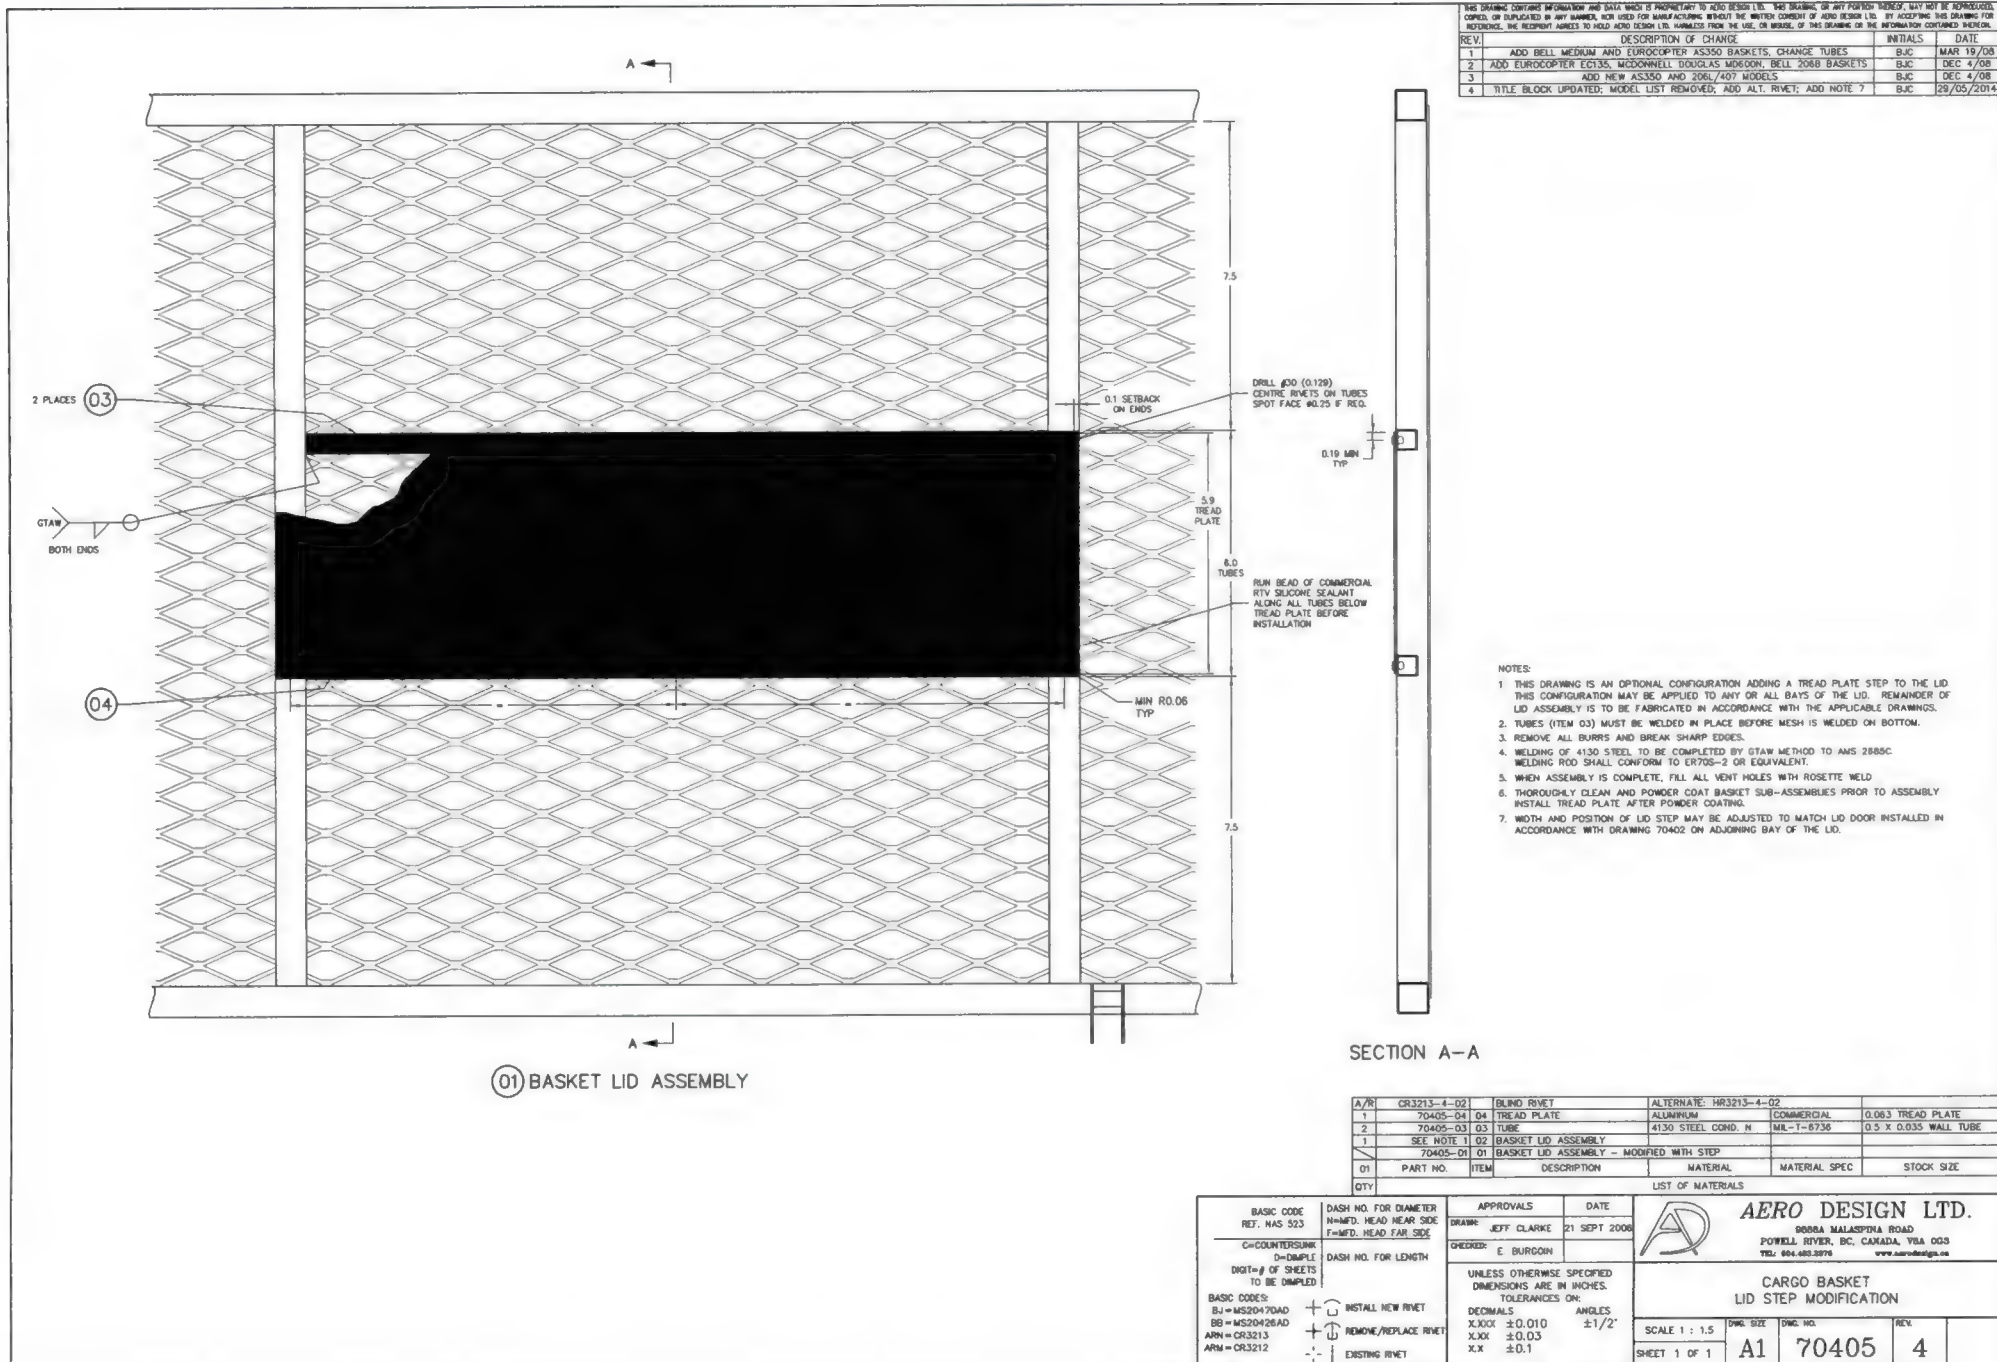

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	UPDATE TITLE BLOCK; UPDATE ADDRESS AND LOGO; MAT'L THICKNESS CHANGED	BJC	10/07/2014

NOTES


- ENGRAVE 0.007 DEEP AS FOLLOWS:
"QUICK RELEASE BASKET" - 0.125 HIGH
"EUROCOPTER AS350 & AS355 SERIES" - 0.080 HIGH
"S/N 94001-XX" - 0.080 HIGH
"MAXIMUM PERMISSIBLE LOAD" - 0.125 HIGH
"300 LBS/136 KG" - 0.200 HIGH
"AERO DESIGN LTD." - 0.125 HIGH
"POWELL RIVER, BC, CANADA" - 0.080 HIGH
"www.aerodesign.ca" - 0.080 HIGH

DRILL #30 (0.129)
4 PLACES




01 PLACARD


94027-01	01	PLACARD	6061-T6 ALUMINUM	QQ-A-250/11	0.050 SHEET
PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
LIST OF MATERIALS					

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREIN.	APPROVALS	DATE	 AERO DESIGN LTD. 9888A MALASPINA ROAD POWELL RIVER, BC, CANADA, V8A 0G3 TEL: 804.483.2376 www.aerodesign.ca		
	DRAWN: R. RATHWELL	OCT 3, 2011			
	CHECKED: E. BURGOIN				
	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ±0.010 ±1/2" X.XX ±0.03 X.X ±0.1		EUROCOPTER AS350 & AS355 SERIES QUICK RELEASE CARGO BASKET PLACARD		
	SCALE 1 : 1	DWG. SIZE	DWG. NO.	REV.	
	SHEET 1 OF 1	A4	94027	1	

REV	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	UPDATE TITLE BLOCK, ADD ALTERNATE BASKET HARDWARE P/Ns, UPDATE CHANGE BRACKET ASSEMBLY TO INSTALLATION	BUC	10/05/2014

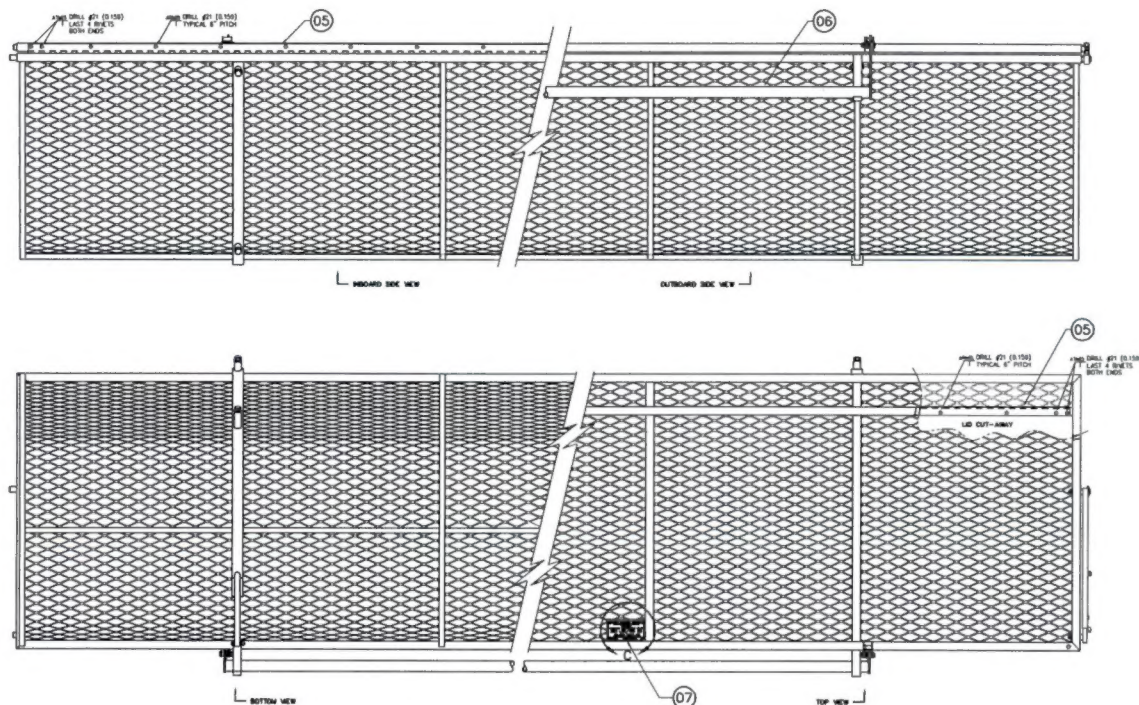


940
10
-0 CARGO BASKET ASSEMBLY - RH

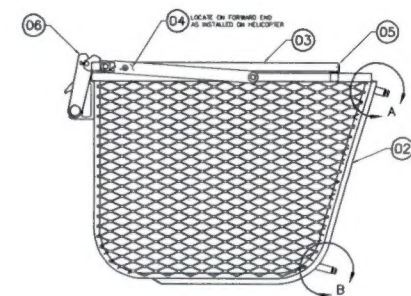

DETAIL A
SCALE 1 : 2
TYPICAL FRONT AND REAR



DETAIL B
SCALE 1 : 2
TYPICAL FRONT AND REAR

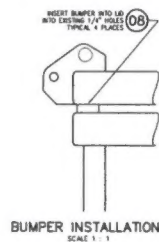

BUMPER INSTALLATION
SCALE 1 : 1



DETAIL C
SCALE 1 : 1
LOOKING AT PLACARD BRACKET

NOTE:
1. ALL DIMENSIONS SHOWN ARE FOR REFERENCE ONLY. DIMENSIONS OF COMPONENTS AND COMPLETE ASSEMBLY ARE DETERMINED IN PREVIOUS STEPS.

QTY	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC.	STOCK SIZE
1	84200-14	08	BUMPER			
1	84200-01	01	PLACARD			
1	84200-01	08	HANDLE BAR INSTALLATION			
1	84200-01	04	LID BAR INSTALLATION			
1	84200-01	03	BASKET LID ASSEMBLY			
1	84200-01	02	BASKET BODY ASSEMBLY			
1	84200-01	01	CARGO BASKET ASSEMBLY			

BASIC CODE	REV	NO. FOR DIMETER	APPROVALS	DATE
01	001	001	W. RATHBELL	20 OCT 2011
02	001	001	E. BURSON	
03	001	001		
04	001	001		
05	001	001		
06	001	001		
07	001	001		
08	001	001		
09	001	001		
10	001	001		
11	001	001		
12	001	001		
13	001	001		
14	001	001		
15	001	001		
16	001	001		
17	001	001		
18	001	001		
19	001	001		
20	001	001		
21	001	001		
22	001	001		
23	001	001		
24	001	001		
25	001	001		
26	001	001		
27	001	001		
28	001	001		
29	001	001		
30	001	001		
31	001	001		
32	001	001		
33	001	001		
34	001	001		
35	001	001		
36	001	001		
37	001	001		
38	001	001		
39	001	001		
40	001	001		
41	001	001		
42	001	001		
43	001	001		
44	001	001		
45	001	001		
46	001	001		
47	001	001		
48	001	001		
49	001	001		
50	001	001		
51	001	001		
52	001	001		
53	001	001		
54	001	001		
55	001	001		
56	001	001		
57	001	001		
58	001	001		
59	001	001		
60	001	001		
61	001	001		
62	001	001		
63	001	001		
64	001	001		
65	001	001		
66	001	001		
67	001	001		
68	001	001		
69	001	001		
70	001	001		
71	001	001		
72	001	001		
73	001	001		
74	001	001		
75	001	001		
76	001	001		
77	001	001		
78	001	001		
79	001	001		
80	001	001		
81	001	001		
82	001	001		
83	001	001		
84	001	001		
85	001	001		
86	001	001		
87	001	001		
88	001	001		
89	001	001		
90	001	001		
91	001	001		
92	001	001		
93	001	001		
94	001	001		
95	001	001		
96	001	001		
97	001	001		
98	001	001		
99	001	001		
100	001	001		

QTY	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC.	STOCK SIZE
1	84200-14	08	BUMPER			
1	84200-01	01	PLACARD			
1	84200-01	08	HANDLE BAR INSTALLATION			
1	84200-01	04	LID BAR INSTALLATION			
1	84200-01	03	BASKET LID ASSEMBLY			
1	84200-01	02	BASKET BODY ASSEMBLY			
1	84200-01	01	CARGO BASKET ASSEMBLY			

BASIC CODE	REV	NO. FOR DIMETER	APPROVALS	DATE
01	001	001	W. RATHBELL	20 OCT 2011
02	001	001	E. BURSON	
03	001	001		
04	001	001		
05	001	001		
06	001	001		
07	001	001		
08	001	001		
09	001	001		
10	001	001		
11	001	001		
12	001	001		
13	001	001		
14	001	001		
15	001	001		
16	001	001		
17	001	001		
18	001	001		
19	001	001		
20	001	001		
21	001	001		
22	001	001		
23	001	001		
24	001	001		
25	001	001		
26	001	001		
27	001	001		
28	001	001		
29	001	001		
30	001	001		
31	001	001		
32	001	001		
33	001	001		
34	001	001		
35	001	001		
36	001	001		
37	001	001		
38	001	001		
39	001	001		
40	001	001		
41	001	001		
42	001	001		
43	001	001		
44	001	001		
45	001	001		
46	001	001		
47	001	001		
48	001	001		
49	001	001		
50	001	001		
51	001	001		
52	001	001		
53	001	001		
54	001	001		
55	001	001		
56	001	001		
57	001	001		
58	001	001		
59	001	001		
60	001	001		
61	001	001		
62	001	001		
63	001	001		
64	001	001		
65	001	001		
66	001	001		
67	001	001		
68	001	001		
69	001	001		
70	001	001		
71	001	001		
72	001	001		
73	001	001		
74	001	001		
75	001	001		
76	001	001		
77	001	001		
78	001	001		
79	001	001		
80	001	001		
81	001	001		
82	001	001		
83	001	001		
84	001	001		
85	001	001		
86	001	001		
87	001	001		
88	001	001		
89	001	001		
90	001	001		
91	001	001		
92	001	001		
93	001	001		
94	001	001		
95	001	001		
96	001	001		
97	001	001		
98	001	001		
99	001	001		
100	001	001		

LIST OF MATERIALS			
01		AERO DESIGN LTD.	
		5988A MALACAPPA ROAD	
		POWELL RIVER, BC, CANADA, V8A 0G3	
		TEL: 250.486.5276 www.aerodesign.co	
EUROCOPTER AS350 & AS355 SERIES			
QUICK RELEASE CARGO BASKET			
BASKET ASSEMBLY (EXTRA LARGE)			
SCALE: 1 : 4		ENG. SIZE	ENG. NO.
SHEET 1 OF 1		A0	94010
			1

Work Order: 2017-44Date Opened: 13 MAR 2017

Material Tracking Sheet
Eurocopter AS350 / AS355
Extra Large Basket Assembly

1 of 2

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
	1		94010-01	Cargo Basket Assembly	S/N 94001-72	
Step 1				<i>Lid Assembly</i>		
	1		94012-01	Basket Lid Assembly		2017-25
Step 1.a.	4		49205-14	Bumper	Argus Industries Bumper	
	A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 1.b.	1		94027-01	Placard	0.063 Sheet, 6061-T6 Aluminum	2015-03
	4		CR3213-4-02	Cherry Rivet		16042
Step 1.c.	1		70405-01	Lid Step Modification		
(option)	1		70405-04	Tread Plate	3003 Aluminum Tread Plate, 0.063"	17011
	A/R		CR3213-4-02	Cherry Rivet		16042
	A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 2				<i>Basket Assembly</i>		
Step 2.a.	1		94011-01	Basket Body Assembly		2017-25
	4		96710-01	Fitting	Alternate: Ancra 40088-14	
	8		AN960-616	Washer		
Step 3				<i>Hinge Installation</i>		
	1		MS20001P4	Piano Hinge	95"	16030
	8		CR3523-5-02	Cherry Rivet		16063
	A/R		CR3213-5-02	Cherry Rivet		16042
Step 4	1		84255-01	<i>Handle Installation</i>		
Step 4.a.	2		84267-01	Bracket	Delrin, 3/4" Sheet	2016-37
	4		AN3-11A	Bolt		
	8		NAS1149F0363P	Washer		
	4		MS21044N3	Nut		

Work Order: _____

Date Opened: _____

Material Tracking Sheet
Eurocopter AS350 / AS355
Extra Large Basket Assembly

2 of 2

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 4.b.	.. 1		84261-01	Handle Assembly		2017-31
	.. 2		36278-01	Spring (1 left, 1 right)	304 Stainless, 1/16" Dia Music Wire	
	.. 2		36275-01	Bushing	Brass, 5/16" Dia	
	.. 2		AN3-12A	Bolt		
	.. 4		NAS1149F0363P	Washer		
	.. 2		MS21044N3	Nut		
Step 5				Lid Brace Installation		
	. 1		36280-01	Brace Assembly		2017-38
	. 1		AN3-15A	Bolt		
	. 1		AN3-17A	Bolt		
	. 2		AN970-3	Washer		
	. 3		NAS1149F0363P	Washer		
	. 2		MS21044N3	Nut		
Step 6				Inspection	None	